



THE BUDGE 1.0 WIRELESS HORN

Fitting instructions.


TX.

NOTE THE 56 DELUXE BOSS WIL NEED DRILLING TO FIT HIS HORN!

- You will need to drill a 2.5mm hole up from the bottom of the boss though one of the three holes to the inside of the boss.



- You will also need to remove the earth tab from the horn push.
- Remove the three screws and washers.

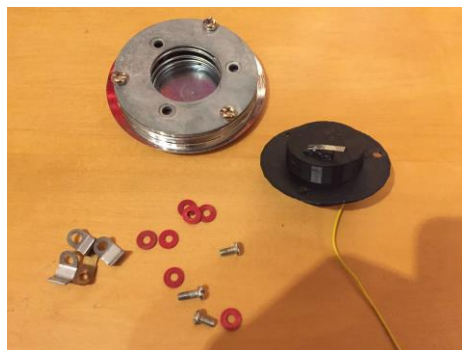

- Now to fit the battery + side out into the battery hold by sliding the top in first

- Then put the bottom of the battery in until it clicks into place.



- Now you can screw the TX carrier to the horn push.

Check you can hear the click of the micro switch when pushing the horn.

If you cant you will need to unscrew the TX carrier and bend the micro switch tab to suit.



- Now with the boss drilled and fitted to the bus you can place the horn push and TX carrier into the boss threading the yellow wire through the 2.5mm hole you have drilled.
- Once this is in place you can cut the yellow cable leaving as much as you can without it interfering with anything.
- Once this is complete you can wire in the RX, instructions are on the website.

Please make sure the RX is within 1-1.5m of the TX and test it is getting a signal before you complete installation.