

THE GEEK SHACK

THE BUDGE I.0 WIRELESS HORN

Fitting instructions.

TX.

NOTE THE MCJ BOSS WIL NEED DRILLING TO FIT HIS HORN!


- You will need to drill a 2.5mm hole up from the bottom of the boss though one of the three holes to the inside of the boss.




- You will also need to remove the earth tab from the horn push.
- Remove the three allen key bolts and spring to take the push out of the case.




- Now you can unbolt the earth tab, and then replace the allen key bolts and springs.

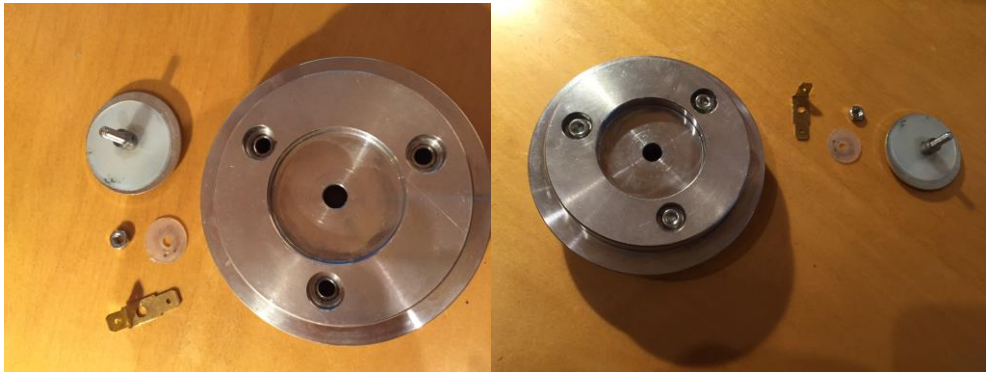

- Now to fit the battery + side out into the battery hold by sliding the top in first
- Then put the bottom of the battery in until it clicks into place.

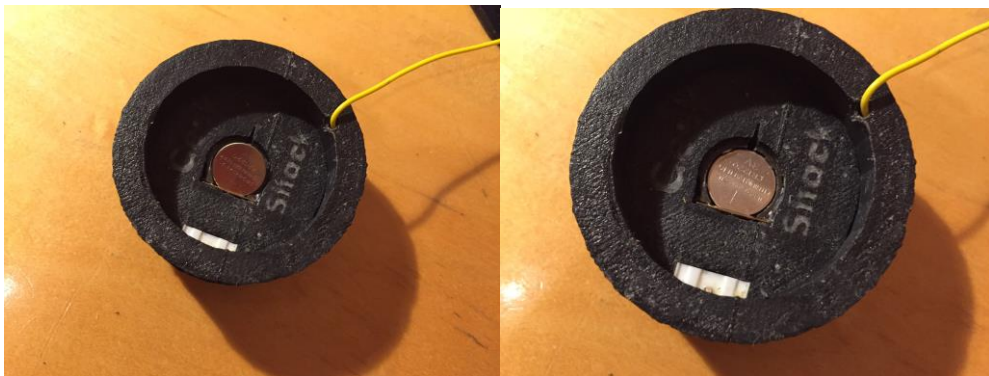

- Now with the boss drilled and fitted to the bus you can place the TX carrier into the boss threading the yellow wire through the 2.5mm hole you have drilled.

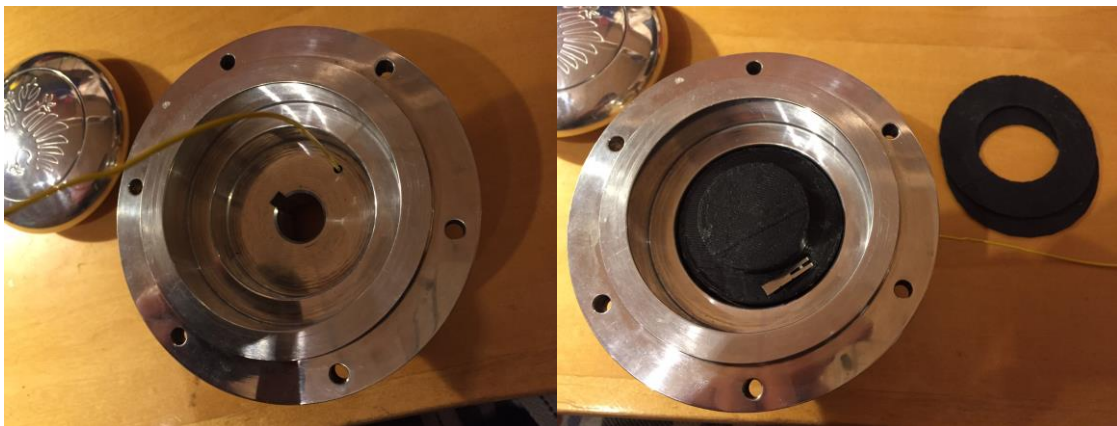

- Once this is in place you can cut the yellow cable leaving as much as you can without it interfering with anything.

- Setting up the horn rings. There are three different thicknesses of horn ring to place over the TX carrier. Place the horn push back on the boss and try the push adding a ring at a time until you hear the click of the micro switch.



- Once this is complete you can wire in the RX, instructions are on the website.

Please make sure the RX is within 1-1.5m of the TX and test it is getting a signal before you complete installation.

WWW.GEEKSHACKLTD.CO.UK

INFO@GEEKSHACKLTD.CO.UK

Patent Number GB 1516075.7

Company Number 9724870 V1.0